

# Welcome to guru engage



## What's in the box



10FootWave Player



Remote



Wifi antenna



Power adapter



2 AAA batteries



HDMI cable

## Your player at a glance



## 1 Install your player

Your player should be installed in an easily accessible location. Install it on the bottom/side/top of your TV or at the top of the TV's back side. Or simply place it on a table! Velcro strips are included for convenient mounting.

**Tip:** The front of the device contains the remote IR receiver, position this blank side facing where you use the remote

Screw in the Wifi antenna before mounting, its placement can make the difference between a strong and weak wifi signal!

## 2 Connect to your TV

Connect an HDMI cable (3ft/1m cable included) to the HDMI port on your player and the HDMI IN part on your TV.

Many TVs have multiple HDMI inputs, make note of the number - for example, HDMI3.



## 3 Power on

**Insert the batteries in the remote**

Turn the remote over, slide the bottom half downward to open the remote. Insert two AAA batteries in your remote.

**Connect the power adapter to your player**



**Press the Power button!**

## 4 Home Screen



Your device will start up to the screen above. Before you can begin playing content, you must set up internet connectivity shown in **Step 6**.

Tip: Access animations of common trouble spots inside **Video on Demand**

## 5 Remote functions



Tip: Pressing the **Home** button brings you to this screen anytime!

## 6 Connect to your network

To use your player, you must connect it to your wired or wireless router. Follow the appropriate instructions below.

### Wireless



Position the antenna with a good sight line to your router.



From the Home screen, select **Settings** then **Wifi**.

Press **OK** to enable Wifi.

Select your network from the list.



Enter your password using the on-screen keyboard.

When you're done entering your password, or if you get stuck, use the **Back** button on the remote!



Once connected, press the **Home** key at the top of your remote.

### Wired

Use an Ethernet cable (not included) to connect your player to your router. In most cases, the player will connect automatically.

If you use Static IPs, please contact support for assistance.

## 7 Customize your screen

You received a username and password by e-mail before your player arrived.

Your username is the numbers in your street address + zip code. For example, 123 Main St, Charlotte NC 28226

Username: 12328226

Your default password is **10footwave**

Log in to customize your screen at

<http://app.10footwave.com>

Click the Help icon -> Documentation in the upper right for detailed guides on customizing your screen!

### What you need to use your player

- A mounted high-definition TV with an available HDMI Input.
- A broadband Internet connection.
- A wired or wireless network.

### Get in touch

Need help?

For frequently asked questions and detailed guides, visit [help.10footwave.com](http://help.10footwave.com)

Need personal attention? Call or E-Mail Us

**support@10footwave.com**  
**877-320-9358**